

## MES Printer Red Light Resolution After Paper Change


1. Take the printer out and place it on top of the mini host computer.



2. Unplug the data cable and power off the printer.



3. With one hand, power on the printer. Immediately press and hold the button on the printer with your other hand. After hearing two beeps, release the button.

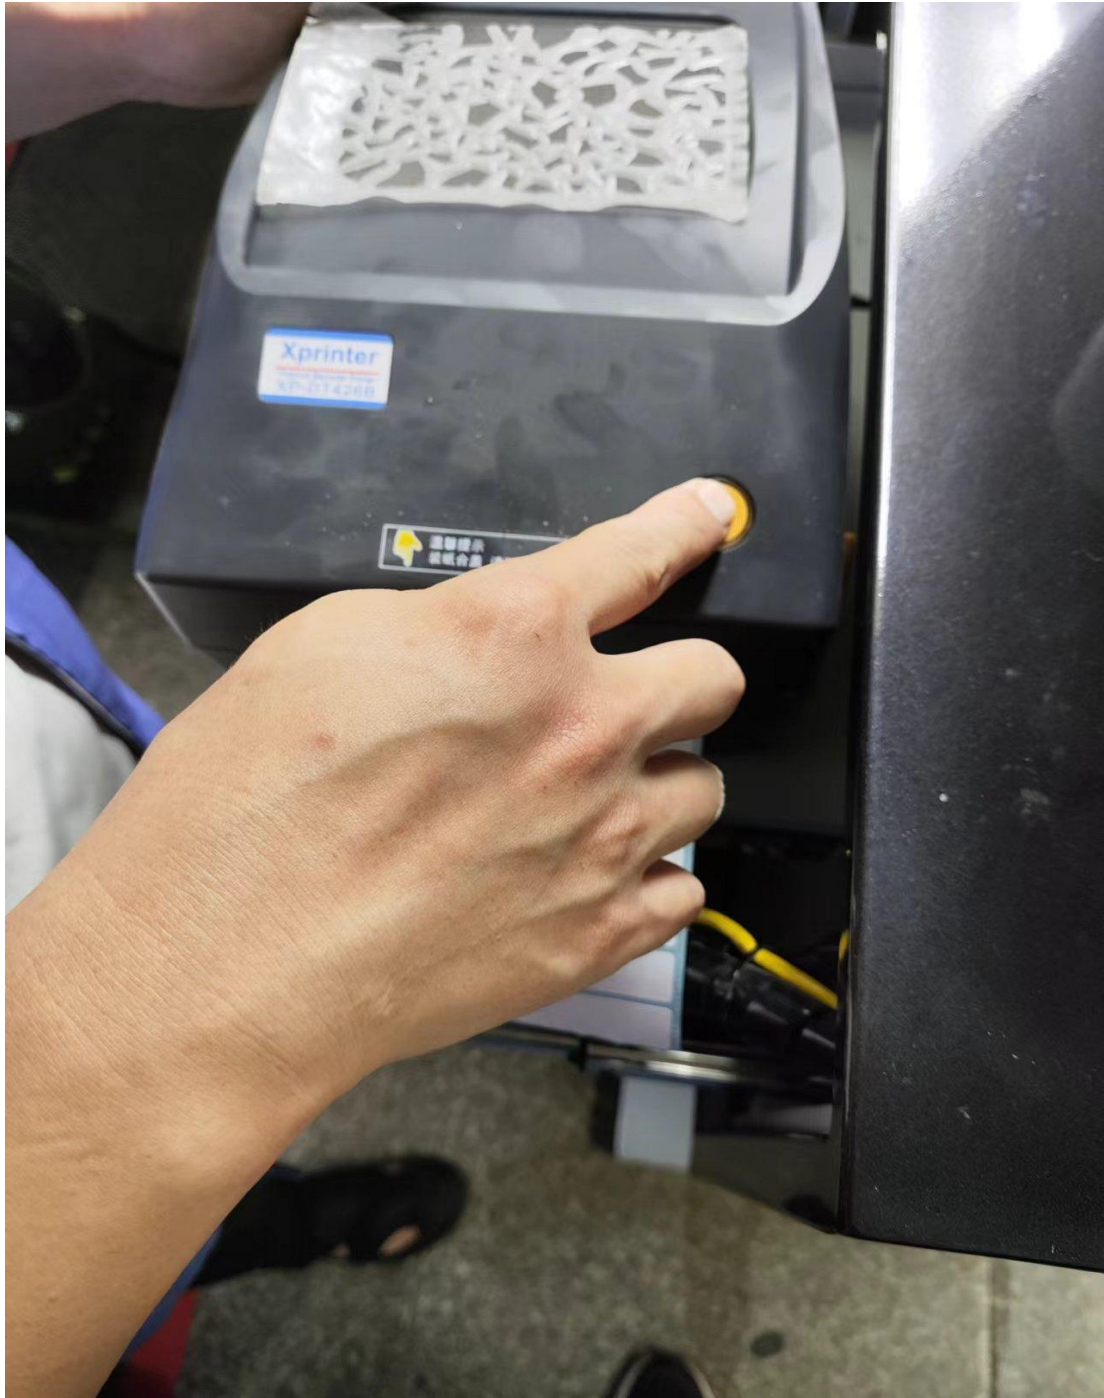

4. Finally, power off the printer, reconnect the data cable, and then power it back on. Test by printing several pages. If there are no issues, return the printer to its original location.