

Workshop MES Printer Paper Replacement

- 1、 Use the key to open the rear cover of the MES machine, as shown below:



- 2、 Press the latch and pull the entire tray out, as shown below:





- 3、 Take the printer out and place it on top of the main unit's housing, as shown below:




- 4、 Press firmly on the marked areas with both hands and push outwards to open the cover, as shown below:




- 5、 Place part 1 (from the diagram) into the center of the paper roll, and place parts 2 on each side, as shown below:



- 6、 Gently place the entire assembly into the middle of the printer's slot, as shown below:

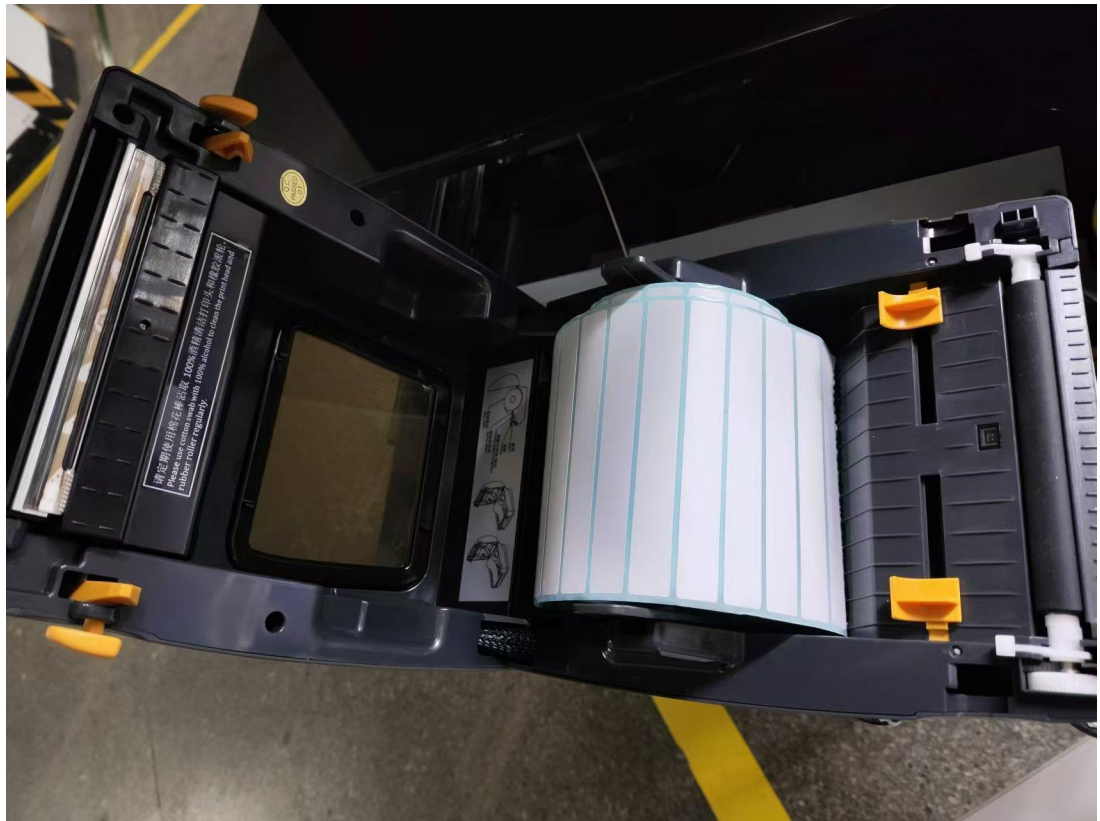

- 7、 Feed the paper through the slot, as shown below:

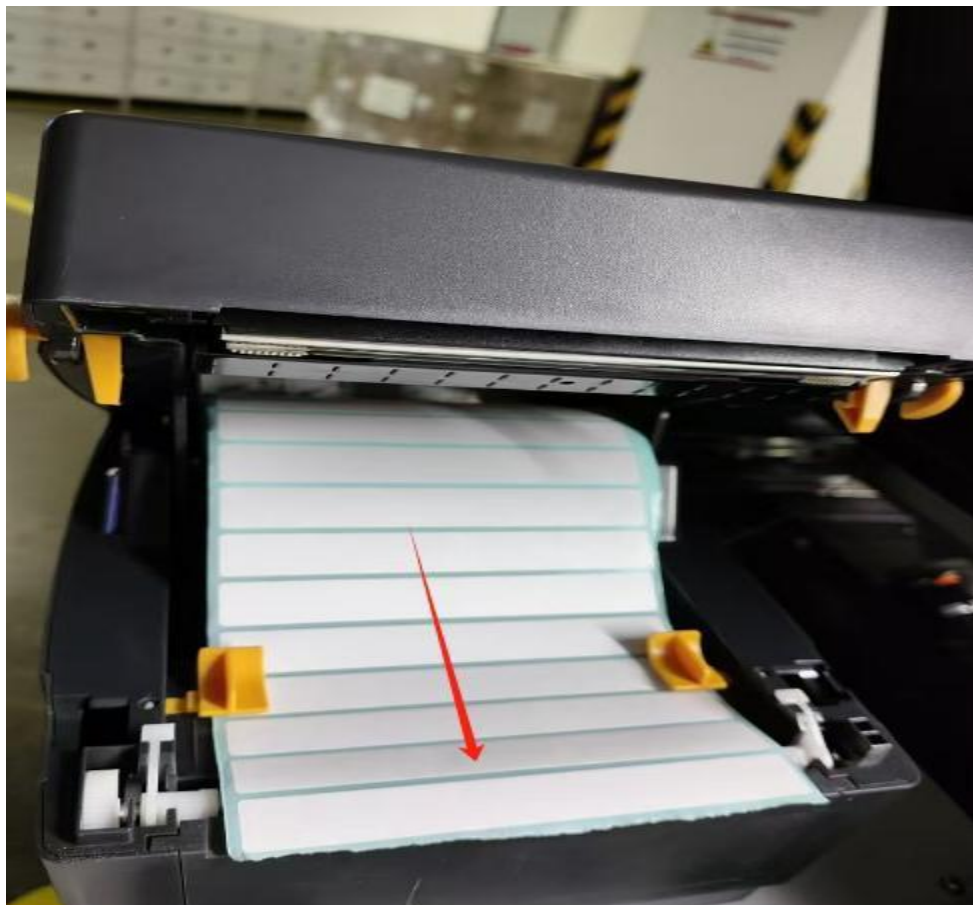

- 8、 Close the printer cover (if it doesn't close easily, push the internal support bracket backwards slightly). The printer's indicator light will turn green.

OK, paper replacement is complete. Return the printer to its original position.

